



SoundPoint® IP 430

Quick User Guide

Basic Phone Features
and Customizing Your Phone

Applies to phones running SIP 2.0 or later controlled by SIP@Net.

For detailed information please consult the comprehensive SoundPoint IP 430 User Guide available at : www.nec-philips.com.



© NEC Philips Unified Solutions Nederland B.V. 2007.
All rights are reserved. Reproduction in whole or in part is prohibited without the written consent of the copyright owner.
All brand names and product names in this document are trademarks or registered trademarks of their respective companies

PLACING A CALL

Using the Handset :

Pick up the handset and enter the number or enter the number first, and then pick up the handset.

Using the hands-free Speakerphone :

1. Using the handset on-hook, press :

- any assigned line key, or
- the **NewCall** soft key.

2. Dial the number.

Or dial the number, and then press the **Dial** soft key.


Using the optional Headset :



1. With the headset connected, press :

- any assigned line key, or
- the **NewCall** soft key.

2. Press .

3. Dial the number.

Or dial the number, and then press .

During a call, you can alternate between hands-free, headset, handset or modes by pressing the  or  keys, or picking up the handset.


ANSWERING A CALL

Using the Handset :


Pick up the handset.

Using the Speakerphone :

Press :

-  button, or
- the line key, or
- the **Answer** soft key.

Using the optional Headset :

Press .

*Incoming calls may be ignored by pressing the **Reject** soft key or Invoking Do Not Disturb during ringing.*

ENDING A CALL

Using the Handset :

Hang up or press the **EndCall** soft key.


Using the Speakerphone :


Press  or the **EndCall** soft key.

Using the optional Headset :

Press  or the **EndCall** soft key.


MICROPHONE MUTE

During a call, press . Mute applies to all modes : handset, headset, and hands-free. You can hear all other parties while Mute is enabled.

To turn off Mute, press  again.

CALL HOLD AND RESUME

1. During a call, press  or the **Hold** soft key.

2. Press  again, the **Resume** soft key, or the line key to resume the call.

LOCAL CONFERENCE CALLS

Conferencing is an optional feature that must be configured on the call server. Particulars and menu options may vary.

To create a three-way local conference call :

1. Call the first party.
2. Press the **Cnfrnc** soft key to create a new call (the active call is placed on hold).
3. Place a call to the second party.
4. When the second party answers, press the **Cnfrnc** soft key again to join all parties in the conference.

*When a conference has been established, pressing the **Split** soft key will split the conference into two calls on hold.*

Placing the call on hold on the conference originator's phone will place the other parties in the conference on hold.

*A conference may be created at any time between an active call and a call which is on hold (on the same line or another line) by pressing the **Join** soft key.*

Ending the call on the conference originator's phone will allow the other parties to continue the conference.


CALL TRANSFER

1. During a call, press the **Trnsfr** soft key (the active call is placed on hold).
2. Place a call to the party to which you want to transfer the call.
3. After speaking with the second party, press the **Trnsfr** soft key to complete the transfer.

*Press the **Blind** soft key to transfer the call without speaking to the second party.*

*Transfer may be cancelled during establishment by pressing the **Cancel** soft key. The original call is resumed.*

REDIAL

Press the **Redial** soft key or  button to redial the most recently dialed number.

FUNCTION PROGRAMMED UNDER SECOND SPEED DIAL KEY

The second speed dial key can be pre-programmed with a dedicated function or a (colleague's) internal telephone number of which the status can be monitored by means of the LEDs (ask your system administrator for more details).

Function

Pressing this key activates the function : the corresponding LED is switched ON.
Pressing the key once more de-activates the function : the LED is switched OFF.

Telephone Number

When the LED is :

- OFF : the telephone is idle
- Flashing : the telephone is ringing : you can answer this call.
- ON : the telephone is the busy

CALL FORWARDING

To activate Call Forwarding :

- Press the second speed dial key, when programmed with the Call Forwarding function (LED is ON), or
- Dial the "activate prefix" possibly followed by the alternative destination number.

To cancel Call Forwarding :

- Press the speed dial key (LED is OFF), or
- Dial the "cancel prefix".

Ask your system administrator for both prefixes.

DO NOT DISTURB

To activate Do Not Disturb with fall back to operator :


- Press the second speed dial key, when programmed with the Do Not Disturb function (LED is ON), or
- Dial the "activate prefix".


To cancel Do Not Disturb :

- Press the speed dial key (LED is OFF), or
- Dial the "cancel prefix".


Ask your system administrator for both prefixes.

An alternative way (no fall back) is :

Press  and select **Features**, and then select **Do not disturb** to prevent the phone from ringing on incoming calls. A Do Not Disturb icon appears for all lines to confirm that Do Not Disturb is enabled.

Press  and select **Features**, and then select **Do not disturb** again to turn off Do Not Disturb.




CALL LISTS

Press , then select **Features** followed by Call Lists. Information on respective calls will be displayed.

From this screen, choose the appropriate soft key :

1. **Edit** to amend the dial string before dialing.
2. **Dial** to return the call.
3. **Info** to view detailed call information.
4. **Save** to store the contact to the Contact Directory.
5. **Clear** to delete the call from the list. Press the **Exit** soft key to return to the idle display.

To quickly view respective call lists from the idle display :

 
- Press  for Placed Calls.
- Press  for Received Calls.
- Press  for Missed Calls.

VOICE MAIL

Voice Mail is an optional feature that must be configured on the call server. Particulars and menu options may vary.

Message Waiting Indicator on the front of the phone and individual line indicators will flash and the stutter dial tone in place of normal dial tone will sound to indicate that message(s) are waiting at the message center.


To listen to voice messages :

1. Press .
2. Follow voice prompts to listen to messages.

SPEED DIALING


To assign a speed dial index, see **CONTACT DIRECTORY** below.


To dial a contact assigned to a line key, press the corresponding line key.

To quickly view the speed dial list from the idle display, press .

CONTACT DIRECTORY


To add a contact in your local phone directory :

1. Press , then **Features** followed by **Contact Directory**.
2. Press the **More** soft key, then the **Add** soft key to enter another contact into the phone's database.
3. Enter first and/or last name from the dial pad. Press the **1/A/a** soft key to select between numeric and upper / lower case alphanumeric modes. Press the **Encoding** soft key to access special characters in other languages if necessary.
4. Enter a unique contact phone number (not already in the directory).
5. Change the Speed Dial Index if desired. It will automatically be assigned the next available index value.
6. Modify the remainder of the fields (Ring Type, Divert Contact, Auto Reject, and Auto Divert) if desired.



7. Press the **Save** soft key to confirm or the **Cancel** soft key to abandon the changes, then press  or the **Exit** soft keys to return to the idle display.

Contacts can be easily added from Call Lists. For more information, see **CALL LISTS** section above.


To search for a contact :

1. Press , then **Features** followed by **Contact Directory**.
2. Press the **More** soft key, and then the **Search** soft key.
3. Using the dial pad, enter the first few characters for First or Last names.
4. Press the **Search** soft key to search for contacts. Searches are case insensitive. Dial successful matches from the resulting search screen.

To edit a contact :

1. Press , then **Features** followed by **Contact Directory**.
2. Search for contact (see above).
3. Press the **Edit** soft key and make the necessary changes.
4. Press the **Save** soft key to confirm or the **Cancel** soft key to abandon the changes, then press  or the **Exit** soft keys to return to the idle display.

VOLUME ADJUSTMENT

 

 
 
Press the  volume keys to adjust handset, headset, and hands-free speaker volume during a call. Pressing these keys in idle state adjusts the ringer volume.

To conform to regulatory requirements, handset and headset volume will return to a preset level after each call, but the configuration can be changed by your system administrator. Hands-free volume settings will be maintained across calls.

RING TYPE

You can select different rings to match your preferences and distinguish between calls on lines.

 

To change the incoming ring :

1. Press .
2. Select **Settings**, followed by **Basic**, and then **Ring Type**.
3. Using  or , highlight the desired ring type. Press the **Play** soft key to hear the selected ring type.
4. Press the **Select** soft key to change to the selected ring type.
5. Press  or the **Exit** soft keys to return to the idle display.

DISTINCTIVE RINGING / CALL TREATMENT

You can set distinctive incoming ringing tones for different contacts in your local directory.




To set a distinctive ring for a local contact:

1. Press , then **Features** followed by **Contact Directory**.
2. Search for the contact (see **CONTACT DIRECTORY** above).
3. Press the **Edit** soft key and scroll down to Ring Type.
4. Enter a number corresponding to one of the ring types available (see **RING TYPE** above).
5. Press the **Save** soft key or the **Cancel** soft key to abandon the change, then press  to return to the idle display.


HEADSET MEMORY MODE

For permanent or full-time headset users, there is an option to default all calls to the headset.

To enable Headset Memory Mode :

1. Press  and select **Settings** followed by **Basic**, **Preferences**, and **Headset Memory**.
2. Use  and  and press the **Select** soft key to enable Headset Memory Mode.

To activate Headset Memory Mode :

Press  twice. The Headset icon will flash.

To disable Headset Memory Mode :

Repeat steps 1 and 2 and select **Disable**.